ZAA 11 WiFi USER MANUAL

Thank you for purchasing this mobile. For the best performance, we recommend that you read the manual carefully.

1. Specifications

Main Display	3.5" capacitive touch
Phonebook capacity*	SIM according to card's type, 500 in the mobile
Hands free	Supported
SMS/MMS	Supported
Incoming number Display	Supported
Alarm clock/Calendar	Supported
GPRS	Supported
TP	Supported
System Used	GSM900/DCS1800
Camera/ video record	Supported
MP3/Record	Supported
Call waiting	Supported
Fixed dialing	Supported (Need network support)
USB Mode/Memory Card	Supported (T-flash card)
File Browsing System	Supported
TV	Supported

2. Key Instruction

Key Name	Function Description
Send key	1. Make or answer a call 2. Press Send key in standby mode to show all the call log.
Home key	Can be go to Home interface
Side key	Increase or decrease the volume
Power key	Long press the power key to Power on /off the phone
Back key	Return to previous page

3. Interface Icons

Icon	Description
	GSM system signal strength
	Bluetooth
	Missed a call
	New message
	Power indicator
	Alarm

4. Insert SIM card

1. Power off the phone and remove other external power
2. Take off the back cover and remove the battery of the phone
3. Insert SIM card into the SIM card slot in the phone.

5. Remove and Install the battery

The attached Li-ion battery along with the phone can be used after unpacking. For the first three times, please use up the power and charger it fully for new battery to perform well

6. Install the battery

1. Put the battery in the battery compartment, note that the metal end of the battery should be firstly inserted
2. Put on the back cover.

7. Remove the Battery

1. Take off the back cover.
2. Put finger on the side finger grip, and then lift up the battery from the finger grip to remove the battery

8. Power on/Off your phone

1. Hold the Power key to power on the phone . The phone will automatically search for the network
2. When the phone is powered on, hold the Power key to power off the phone
   Make or Answer a Call, As following the picture,

Input the numeric and the touch the "Call" area or press Send key.

9. Answer a call

There is an incoming call, as the picture

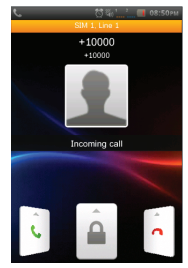

You can Press Send key to answer the call or touch the icon to answer the call.

10. Message

Enter Messaging-Write message to create a new message. Includes options for reading, creating and sending message. As the picture:

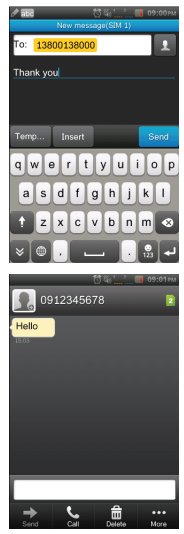

11. Contacts

You have 2 phonebooks in this mobile phone: SIM card and the mobile. The mobile can store 500 phone numbers and the SIM card's capacity depends on its type. Lets you save an edit contacts and contact related information to the phone. As the picture

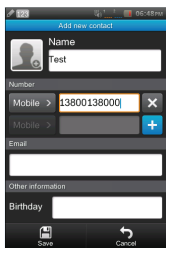

12. Call log

Includes phone numbers of recent call,

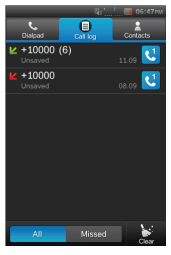

Highlight one record and then you can view the detail.

13. Calendar

Includes options for writing and viewing calendar notes and lets you set a reminder alarm. As picture,

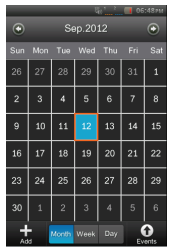

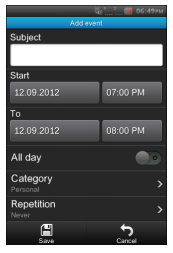

14. Camera

Lets you use the phone as a digital camera. You can view and send the photo that you have taken. And you can switch to video record.

15. Settings

Includes settings related to Network and security and s o on

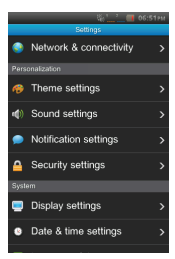

Notes

Restore factory settings: Restore the default setting of the phone. You need to enter the phone lock password, and the default password is '0000'.

16. Music

The Music can be play mp3 file, Let's you listen to audio files through headset or loudspeaker.

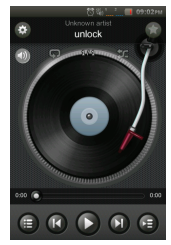

17. Browser

The cell phone provides WAP browser to facilitate you to surf the Internet. You must register through network operators to obtain permission and then set relevant options before using the function.

18. Gallery

Let's you mange your image and audio and video files. In this interface ,you can View the image and play the audio/video file.

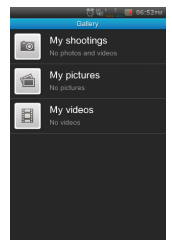

19. Recorder/FM

The phone support recorder and FM,As

20. Mobile TV

The phone support TV, you can watch TV after select correct area, as

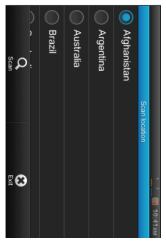

Notes

1. The phone offer some games, asHappyWar and Moto

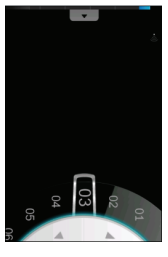

21. Specific Absorption Rate information

Your phone has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted by using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various i-Mobile phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) grams of tissue.

22. Battery Information

Type	Capacity
li-ion	1050 mAh

23. Condition Of Waranty

1. Mobile phone device, portable charger, charger, memory card, wireless headset are in-warranty of 12 months after the date of purchase.
2. Battery, headset, USB data connector are in-warranty of 6 months after the date of purchase.
3. This warranty shall apply to mobile phone and accessory under "i-mobile" brands that are purchased from Shop namely, I-mobile by Samart and Authorized Distributor or Authorized Service Center as appointed in Thailand only.
4. The condition of the warranty for mobile phone and accessory that are purchased in other countries, except Thailand. It shall be applied in accordance with the applicable law. For Thailand, the purchaser acknowledges the end of warranty period as stated in the warranty sticker or purchase's record of i-mobile system.
5. Within the warranty period, maintenance or parts replacement is free of charge. Should be noted that i-mobile reserves the rights no return the damaged part.
6. i-mobile provides warranty for mobile phone and accessory with the terms and conditions that are stated in the law excluding the commerce, product satisfaction, lost of benefit or expected profit, loss or damages from the violation of personal rights in conversation, and working discontinuance or loss of information arising of the use or inability to use.
7. In cellular network / signal and sounds that are used with mobile phone and accessory is the service of independent operators, not i-mobile. Therefore, i-mobile will not be responsible for the working process, the readiness of the service, and the area covered.
8. Any mobile phone and accessories that are already repaired or had parts replacement, the warranty period will continue from the remaining warranty onward or 60 days from the repaired date whichever is longer.
9. Customer has to pay for the repair cost and cost of replacement parts provided that the said repair are not in the warranty conditions.
10. The warranty sticker on the mobile phone must not be torn, tattered, scraped or crossed out.

THIS WARRANTY IS VOID UNDER THE FOLLOWING CONDITIONS

1. Mobile phone and accessory are damaged due to the abnormal use, improper use, being stored in the damped or overheated area, or other inappropriate environment, the interference that can cause damage, including unforeseeable accident, spill with liquid or food, or any actions that cause damages to mobile phone and accessories.
2. Mobile phone and accessory are damaged due to the natural disaster.
3. Mobile phone and accessory are repaired, changed parts, adjusted, modified, connected, customized without any authorization by i-mobile.
4. Using of mobile phone and accessory together with, or connect with the mobile phone or accessory that are neither provided nor certified by i-mobile including any accessory are inappropriate to use together with mobile phone and accessory.
5. Small alteration in the brightness and color on the screen might occur in each mobile phone and accessory, might results in bright or dark dots on the screen. This is called as pixel defect. It can occur when these pixels are malfunction and cannot be modified. The Pixel defect of 2 pixels is considered acceptable. Small alteration in a picture taken by a camera might occur in each mobile phone and accessory is considered normal and it is not the camera module to be deemed as malfunction.
6. Editing, scarping, crossing over the IMEI number of the mobile phone or accessory, including the warranty number will be deemed as the termination of the warranty.
7. Damaging of the label, warranty sticker on the mobile will be deemed as termination of the warranty.
8. i-mobile will not assure provided that the software from i-mobile will be up to your wishes or the working process of the software will not be discontinued or flawless.
9. i-mobile will not assured provided that the additional software to download or install by you for the purpose of work or entertainment will be up to your wishes without mistakes and flaw that is out of control of i-mobile.
10. The warranty and responsibilities of i-mobile are not covered the malfunction of any software or access of information from virus, or unauthorized access, which cause the damage in the banking transaction, E-banking, or any important information, or using the mobile phone illegally.
11. The warranty will not cover the loss of personal information during the use or during the installation, software remove, including applications, songs, videos, and any memberships that Customer has already purchased.
12. The warranty will not cover the responsibility of the loss of any personal information during the repair at Authorized Service center of i-mobile, including the applications, songs, videos, and any memberships that Customer has already purchased.
13. The warranty will not cover the damage that occurs from the use of any device under "i-mobile brand" with other products which are not the product of i-mobile.
14. The warranty will not cover any expenses in the co-ordination with i-mobile for solving the problem and the process of delivering for examination and repair service.